



Safemate Trigger Four

Mobile social alarm with SOS-button, two-way voice communication, fall detection, and GPS


Features

Trigger Four is a small mobile social alarm that can be set up as a mobile social alarm or a tracking alarm.

SOS-button is triggered when activated for a minimum of 1 second (*default*).

Two-way voice communication - carrier and receiver can speak using the speaker/microphone (*telephony/VoLTE*)

Tracking - GNSS/GPS, Bluetooth BLE, og WiFi position where the Safemate is located (*with consent by the carrier*).

- SOS-button
- To-way voice communication
- Tracking
- GSM, GPS, Bluetooth, Wi-Fi
- IPX7 Waterproof
- Fall detection 
- Geofence
- 4G (Cat-M1)
- Remote configuration of alarm via web portal



Charging!

GPS and mobile technology requires a lot of the battery, so it is important to establish good routines for charging. The product is charged with a desk-charger or magnetic charging cable. Both are included.

 
When the Trigger Four is completely discharged, it takes about 2-3 hours to recharge to 100% again. Fully charged battery lasts up to 7 days depending on coverage conditions and selected setting. Caregivers and/or relatives can be set up to receive low battery alerts.

LED indications

On the left side there are three small LED lights with the colors green, blue and red.

- Short double green flashes every 3 seconds mean that the Trigger Four is connected to the Safemate server. Simple green flashes mean that the Trigger Four has no contact with the server. Turning Trigger Four on and off can solve this problem.
- Blue flashes indicate positioning status. A short blink means that the device has no position, several short double flashes mean that the device has a valid position.
- Red light flashes long blink every 5 seconds to indicate charging in progress. A fixed red light means the Trigger Four has a fully charged battery. Outside the charger, the lamp will blink briefly every 3 seconds if the battery is low.

Hold the upper side button and (at the same time) hold SOS-button for three seconds to turn off Trigger Four

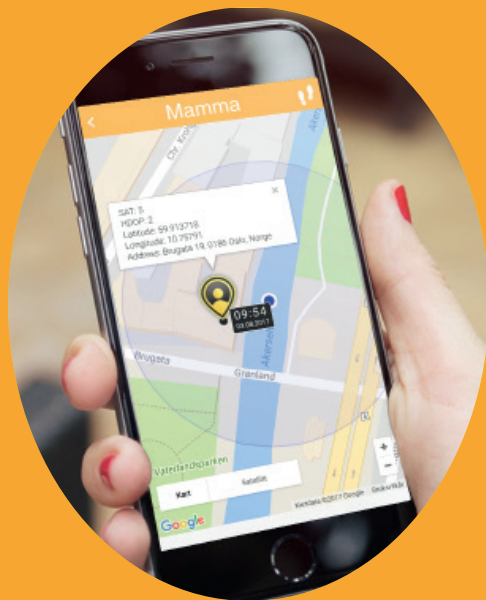

Tracking

When Trigger Four cannot receive GPS signals, Wi-Fi network can be used for tracking. Wi-Fi is only used for tracking, and not as a communication channel.

Who can see where the Trigger Four is located?

The Trigger Four transmits the position according to the scheduled interval, typically every minute. Safemate PRO administrators have access to view locations going back 14 days. Administrators can adjust tracking settings.

Specifications

Model:	EV-07-BX
GSM:	B1/B3/B7/B8/B20
SIM type:	Micro SIM 4FF
Communication:	CAT-M1 (LTE/4G/SMS)
Weight:	35 g
Dimensions:	61x44x16 mm
IP:	IPX7
Radio protocols:	Bluetooth (BLE) /Wi-Fi/Rfid
Localization sources:	GPS/Beidou/GLNss/WiFi/BLE/LBS
GPS model:	AT6558
Hot/warm/cold start:	1sec/32sec/32sec
Battery life:	5-7 days
Battery:	800 mAh
Temperature range:	-20C - +55C
Certifications:	CE/RoHS

